Congratulations on your new floor!

Your new wood or cork floor is impregnated and protected with high-quality eukula oils. These professional products protect the wood in the best possible way, but cannot protect it from the natural wear and tear caused by continuous use. That's why proper cleaning and care are indispensable for maintaining its value.

The right care for long-lasting protection

If you clean your floor properly and use the right care products regularly, you will preserve its attractiveness and extend its lifetime. Therefore, your wood and cork floor is only guaranteed if you follow the care instructions of your floor fitter.



Further information can be found here in our technical information sheet.

Please also note the product information of the products mentioned.

Please also consider the individual recommendations of your floor fitter!

This instruction complies with the rules of the trade and was handed over by:

Wood as a natural material and indoor climate

A healthy room climate is good for you and your floor.

The ideal room climate is approx. 20°C and a relative humidity of approx. 50%. Wood is a natural material and the wood moisture permanently adapts to the moisture content of the room air. Due to this "working" (swelling or shrinkage), gaps may appear in the wooden floor as a natural process in winter. This effect can be counteracted through targeted air humidification.

Area of application

Valid for all industrially and manually oiled-impregnated wood and cork floors, especially with eukula oil 1 FS, eukula oil 2+ FS and eukula color oil FS.

Do not use the products mentioned here on wooden floors without colour-deepening impregnation, especially lacque-red/coated surfaces.



Do you have underfloor heating/cooling? Then talk to your fitter for further advice.

Preventive measures

- ... that protect your wooden floor in the long term:
- Suitable entrance mats and **protective mats**, especially under castor chairs
- Furniture gliders such as the Dr. Schutz scratchnomore system

 \bowtie

0

 \bigcirc

Careful placement of furniture



6000642301 12/22

rt.-Nr.: 6

eucula[®] a brand of Dr. Schutz[•] GROUP

\$ +49 (0)228 / 95352-0

Dr. Schutz GmbH
Holbeinstraße 17
53175 Bonn

www.eukula.com info@eukula.com

/eukula_de {JOIN US /eukula_int



1

Cleaning and care instructions

for impregnated-oiled wood & cork floors

LOVE YOUR WOOD FLOOR!

handle with

Initial care

We recommend initial maintenance of every impregnatedoiled floor before it is put into operation. This initial care is mandatory after the installation of factory pre-oiled wood, unless otherwise specified in the installation instructions. For this, please contact your floor fitter.

TIP: Further details and our technical information can be found under eukula.com/downloads.

Routine cleaning

First remove coarse dirt and sand with a hair broom, mop or hoover. Wipe up dirt with a damp cloth. To do this, add eukula care emulsion or eukula care emulsion white for white wood floors to the mopping water.



eukula care emulsion: Soap-based care product for all oiled floors

Did you already know?

Our tips from the wood flooring professional

- Wood likes it slightly damp so avoid too much moisture.
- Chemicals, coloured products or metal contact will damage your wooden floor! Always use protective mats!
- Carpet underlays must be suitable for oiled floors.

With the right care, you can enjoy your real wood floor for a long time. More tips from the eukula professionals and further details on preventive measures and care can be found under eukula.com!

Strip cleaning

If the floor becomes unsightly after some time, e.g. due to heavy soiling or care layers, a manual or mechanical strip cleaning should be carried out. Strip cleaning is also carried out before re-oiling.

Mix eukula care emulsion or eukula care emulsion white 1:10 in water and remove residues with the support of a green pad or brush. Then rinse with clear water and allow to dry thoroughly. Work in sections to keep the water load on the floor low. After strip cleaning, the impregnation of the floor must be refreshed by re-oiling (see "Re-oiling").

In case of heavy soiling, we recommend eukula intensive cleaner in a dilution of 1:3.

TIP: For all questions related to strip cleaning and renovation ask your floor fitter.

Re-oiling / Refreshing

After strip cleaning, the application of an oil care is indispensable. Carry out a maintenance cleaning / care beforehand.

Then apply eukula refresher classic or eukula refresher classic white (oil-wax-care combination) according to the absorption level of the wood and polish afterwards without leaving any residue. We recommend using a single-disc machine.

Alternatively, re-oiling is also possible with the original impregnation oil. Coloured floors should be re-oiled in the corresponding colour to refresh the colour!

Important: Re-oil your floor as soon as it is worn out and shows signs of cleaning and wear.



eukula care emulsion: Soap-based care product for all oiled floors

Soap cleaners like eukula care emulsion not only clean, but also contain nourishing oil components for your floor!

also available in white





eukula refresher classic: Refreshing impregnated-oiled floors

For the care and refreshment of oxidatively oiled floors, we recommend eukula refresher classic. Refreshes dull, particularly stressed and intensively cleaned oil surfaces.



also available in white

TIP: Please contact your floor fitter. In addition to specialist knowledge and experience, they also have the necessary machines!







